
CUSTOM SPECTRA

The Science of Plant Growth Surexi[™] Horticulture LED Series by Illumitex

The Surexi[™] F1, F3, F6 and F7 custom spectra LEDs are designed to work as self-sufficient light sources for horticulture applications. The Surexi[™] supplemental wavelength LEDs are designed to complement sunlight or other light sources where applicable. Customized horticulture lighting spectra can also be developed by Illumitex upon request to meet specific application needs.

F1 SPECTRUM General Purpose, High Efficiency

The F1 spectrum is suitable for a variety of plant species throughout their growth cycle. It contains a high proportion of red light, which spurs photosynthesis during the vegetative growth stage and facilitates the flowering stage. It has the highest photon yield efficacy of all custom Surexi[™] spectra and is recommended for applications with a tight electrical energy budget.

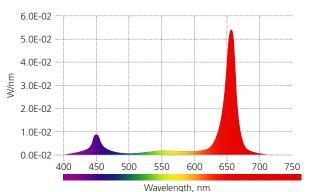


6.0E-02 5.0E-02 4.0E-02 W/nm 3.0E-02 2.0E-02 1.0E-02 0.0E-02 450 500 650 700 400 550 600 750 Wavelength, nm

F3 SPECTRUM


Best for Germination and Flowering

This spectrum produces the fastest germination for plant species whose germination requires light. It also gives the best flowering results among all Surexi[™] spectra. Recommended for use in germination chambers and for flower production.

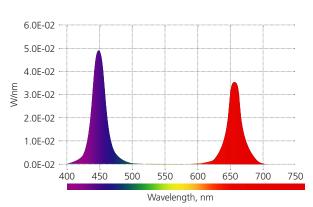

F6 SPECTRUM Best for Vegetative Growth

The F6 spectrum has an enhanced blue region and provides the fastest vegetative growth results. The increased blue content reduces plant height, thereby improving plant appearance and space utilization. Recommended for the production of leafy green vegetables.

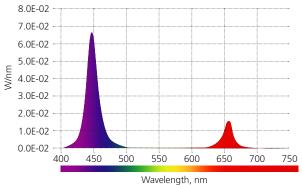

F7 SPECTRUM Best for Seedlings

This spectrum has the highest blue content of all Surexi[™] spectra and produces stocky plants with short internodal distances, highly desirable at the seedling stage. Recommended for growing seedlings prior to transplantation.




www.illumitex.com


5307 Industrial Oaks Blvd., Suite 100 Austin, TX 78735 USA Tel: +1 512.279.5020 © 2011 Illumitex Inc. All rights reserved. The information in this document is subject to change without prior notice.

The Science of Plant Growth

The Surexi[™] F1, F3, F6 and F7 custom spectra LEDs are designed to work as self-sufficient light sources for horticulture applications. The Surexi[™] supplemental wavelength LEDs are designed to complement sunlight or other light sources where applicable. Customized horticulture lighting spectra can also be developed by Illumitex upon request to meet specific application needs.

450 nm BLUE This light enacts regulation by cryptochromes and phototropins, mediating various plant responses, such as phototropic curvature, inhibition of elongation growth, chloroplast movement, stomatal opening and seedling growth regulation.Can be directly absorbed by chlorophyll in photosynthesis. Recommended as supplemental light for seedlings and young plants during the vegetative stage of their growth cycle, especially when "stretching" must be reduced or eliminated.

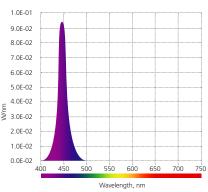

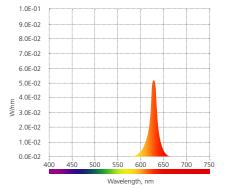



625 nm RED

This wavelength has the highest photosynthetic relative quantum yield for a range of plants. At the same time, its action on red-absorbing phytochrome is considerably weaker compared to that of 660 nm red light and can be used to balance the phytochrome equilibrium towards lower values (closer to those of daylight) than those achievable with 660 nm red light, especially when used together with 730 nm red light.

660 nm DEEP RED

This wavelength has a very strong photosynthetic action and also exhibits the highest action on red-absorbing phytochrome regulated germination, flowering and other processes. Most effective for light cycle extension or night interruption to induce flowering of long-day plants or prevent flowering of short-day plants. Most energy-efficient source for photosynthesis among all available supplemental LEDs.

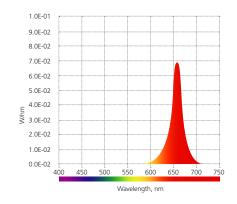

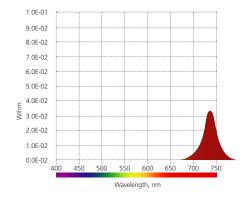

730 nm FAR RED

Although this wavelength is outside the photosynthetically active range, it has the strongest action on the far-red absorbing form of phytochrome, converting it back to the red-absorbing form. It becomes necessary for plants requiring relatively low values of the phytochrome photoequilibrium to flower. Can be used at the end of each light cycle to promote flowering in short-day plants.

www.illumitex.com

PRECISION LIGHT. INFINITE POSSIBILITIES.

5307 Industrial Oaks Blvd., Suite 100 ■ Austin, TX 78735 ■ USA ■ Tel: +1 512.279.5020 © 2011 Illumitex Inc. All rights reserved. The information in this document is subject to change without prior notice.